



How to use your Heaters

There are two types of heaters at GHR, analogue and reactive based. Below are instructions on both. Please check which heater type you have in your apartment (pictures below).

Analogue:

Hallway Heater (only in winter months):



Please Keep Switched On - As per the sign on the wall, the switch for this heater should always be left "ON".

Please switch it to the "ON" position.

This will maintain the general heat of the apartment. It will store heat at night and continue to heat the apartment during the day.

Kitchen/Living Room Heater:



This heater has two switches:

1. **Please Keep Switched On** - As per the sign on the wall, this switch for this heater should always be left "ON" (only in winter months).

Please switch it to the "ON" position.

This will maintain the general heat of the apartment. It will store heat at night and continue to heat the apartment during the day.

2. **Heating Boost** – **please switch it to the OFF position** unless the room is cold and you need extra heating. Please switch this off as soon as the room has heated up again.

Please ensure you always switch this off when you leave the room (any point throughout the year).

Bedroom Heater:



Heating Boost – please switch it to the OFF position unless the room is cold and you need extra heating (any point throughout the year).

Please switch this off as soon as the room has heated up again.

Please ensure you always switch this off when you leave the room. Please do not touch any internal settings on the heater itself as they are set at their ideal heat settings.

Reactive:



Our reactive heaters are all automatically set to a standard temperature in reaction to the external temperatures. For example, if the ground floor is set to 20 °C, the rest of the floors may be set to 19 °C. Our maintenance team review the temperatures weekly to ensure that they are set to an appropriate temperature depending on the weather and, of course, the heating temperatures will automatically rise as it gets colder.

Temperatures cannot be adjusted in the apartment manually. They are controlled from a central location.